


| TROUBLESHOOTING                                                  |                                                                                           |                                                                                         |
|------------------------------------------------------------------|-------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| Problem                                                          | Posible Cause                                                                             | How to Repair                                                                           |
| Pump is not running                                              | Unplugged power cord/switch off                                                           | Plug cord/ turn switch on                                                               |
| Suggested service center repairs for below problems              |                                                                                           |                                                                                         |
| Problem                                                          | Posible Cause                                                                             | How to Repair                                                                           |
| Low pressure                                                     | 1. Air in the system<br>2. Dirty intake filter<br>3. Faulty pump<br>4. The jet is too big | 1. Bleed the system<br>2. Clear/replace filter<br>3. Repair o replace<br>4. Replace jet |
| Pump not running                                                 | 1. Faulty circuit braker<br>2. Other electrical problem<br>3. Reset pump(1200 psi pump)   | 1. Contact a service center<br>2. Contact a service center<br>3. Press reset button     |
| Caution: Disconnect all electrical power when servicing the unit |                                                                                           |                                                                                         |

PUMP CARE INSTRUCTIONS

Use pressure regulator valve to control the output pressure while holding the solution valve open.(power on)

Glycerin filed pressure gauge helps to regulate and maintain the exact pressure. Bleed the system when air is in the pump or intake hose of the pump. (when the pressure gauge fluctuates or machine does not maintain a stable pressure)

Chemicals added in the solution tank will leave some residue. This pump will have a long life if the machine is rinsed after every use and then allow clean water to flow from the pump and through the wand and jets. In “hard water” areas and with chemical usage, it is recommended that at least once per month some “tanning remover” or vinegar be run through the machine to keep the residue from building up.

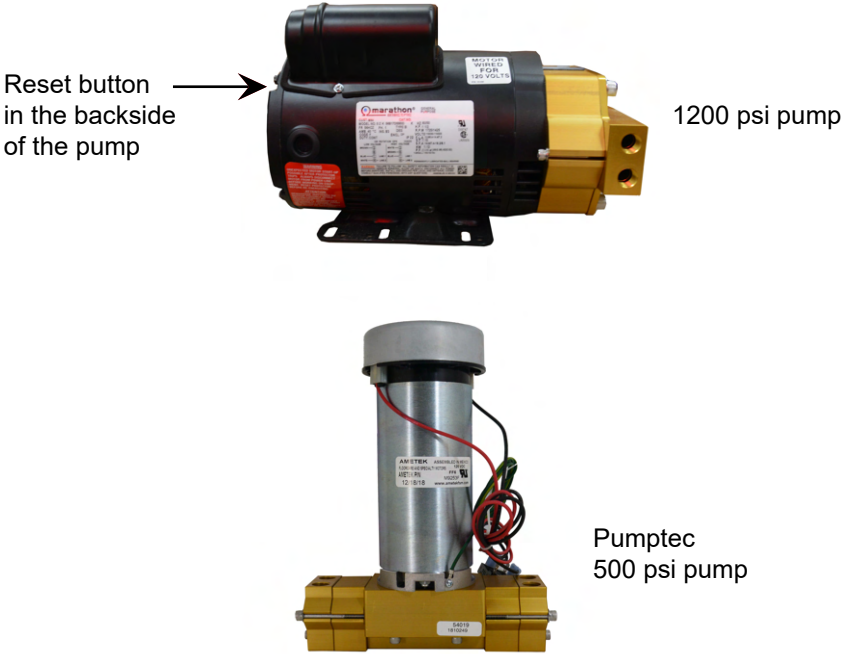

Use image as a reference only, pump location might change depending on the model number.