


CAUTION



MAKE SURE

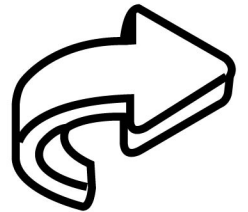

TO RINSE
ANTI-FREEZE
FROM EQUIPMENT
BEFORE OPERATING!

see "HOW TO RINSE" instruction
on back of this page

HOW TO RINSE


3 BASIC STEPS

1. FILL SOLUTION TANK WITH 2 GALLONS OF CLEAN WATER
2. CONNECT SOLUTION HOSE AND VACUUM HOSE TO EXTRACTOR AND ATTACHMENT TOOL
3. A. **UNIT WITHOUT HEATER (PUMP OUT)**: see below images
PRESS SOLUTION CONTROL LEVER VALVE TO THE ATTACHMENT TOOL,
UNTIL ALL THE CLEAN WATER FROM SOLUTION TANK IS EMPTY OR
CONTINUE TO PRESS THE SOLUTION CONTROL LEVER VALVE **FOR 1-2 MINUTES**.

B. **UNIT WITH HEATER PUMP OUT (PUMP OUT)**: see below images
PRESS SOLUTION CONTROL LEVER VALVE TO THE ATTACHMENT TOOL,
UNTIL ALL THE CLEAN WATER FROM SOLUTION TANK IS EMPTY OR
CONTINUE TO PRESS THE SOLUTION CONTROL LEVER VALVE **FOR 5 MINUTES**.



image 3A, 3B
Press the lever
to open the valve

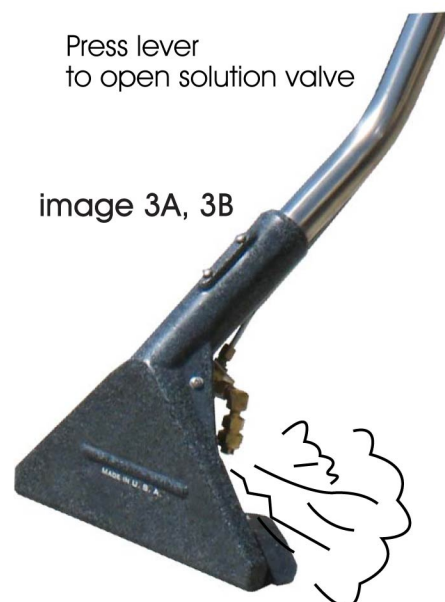

Press lever
to open solution valve

image 3A, 3B